

Dishwasher quick sheet

A stand-in for the manual that usually lives in a drawer. Two short pages.

Fictional sample for the Miller home preview on trustmoses.com. Not a real certificate, policy, bill, manual, or contract.

Everyday use

- Scrape plates. Load the Miller home machine so the sprayer arm can turn.
- Put one sample pod in the main cup. Close the cup.
- Choose a cycle, then press Start.
- Cancel ends the cycle and drains. The door stays locked for a short sample delay.

Buttons on this sample model

Control	What it does in this fiction
Cycle	Normal, Light, or Pots.
Dry	Heated dry, or air dry if the family prefers it off.
Start	Begins the selected cycle.
Cancel	Stops and drains.
Lock	Keeps the controls quiet. Hold for a three-count.

Once a month

- Twist out the bottom filter, rinse it, and seat it again.
- Refill the rinse aid when the lamp on this sample model comes on.
- Wipe the door edge so the gasket seals.

If something seems wrong

What you see	Sample check
Steady tap lamp	The door is not latched.
Dishes still gritty	The filter is seated, and the arm was not blocked.
Water in the tub	Cancel, let it drain, then run Light once.
Will not start	Lock is off, and the breaker for the dishwasher is on.

Creekside and DW-sample 400 are invented for this preview. No manufacturer's manual, error-code list, or logo is reproduced.

The dishwasher breaker is space 5 in the laundry-room panel directory. See Breaker-panel-labels.jpg.